

# AmeriGlide ULTRA Stair Lifts

BOS (Battery Operated System)




AmeriGlide



## ULTRA FEATURES

Designed for comfort and safety.  
Built to last.

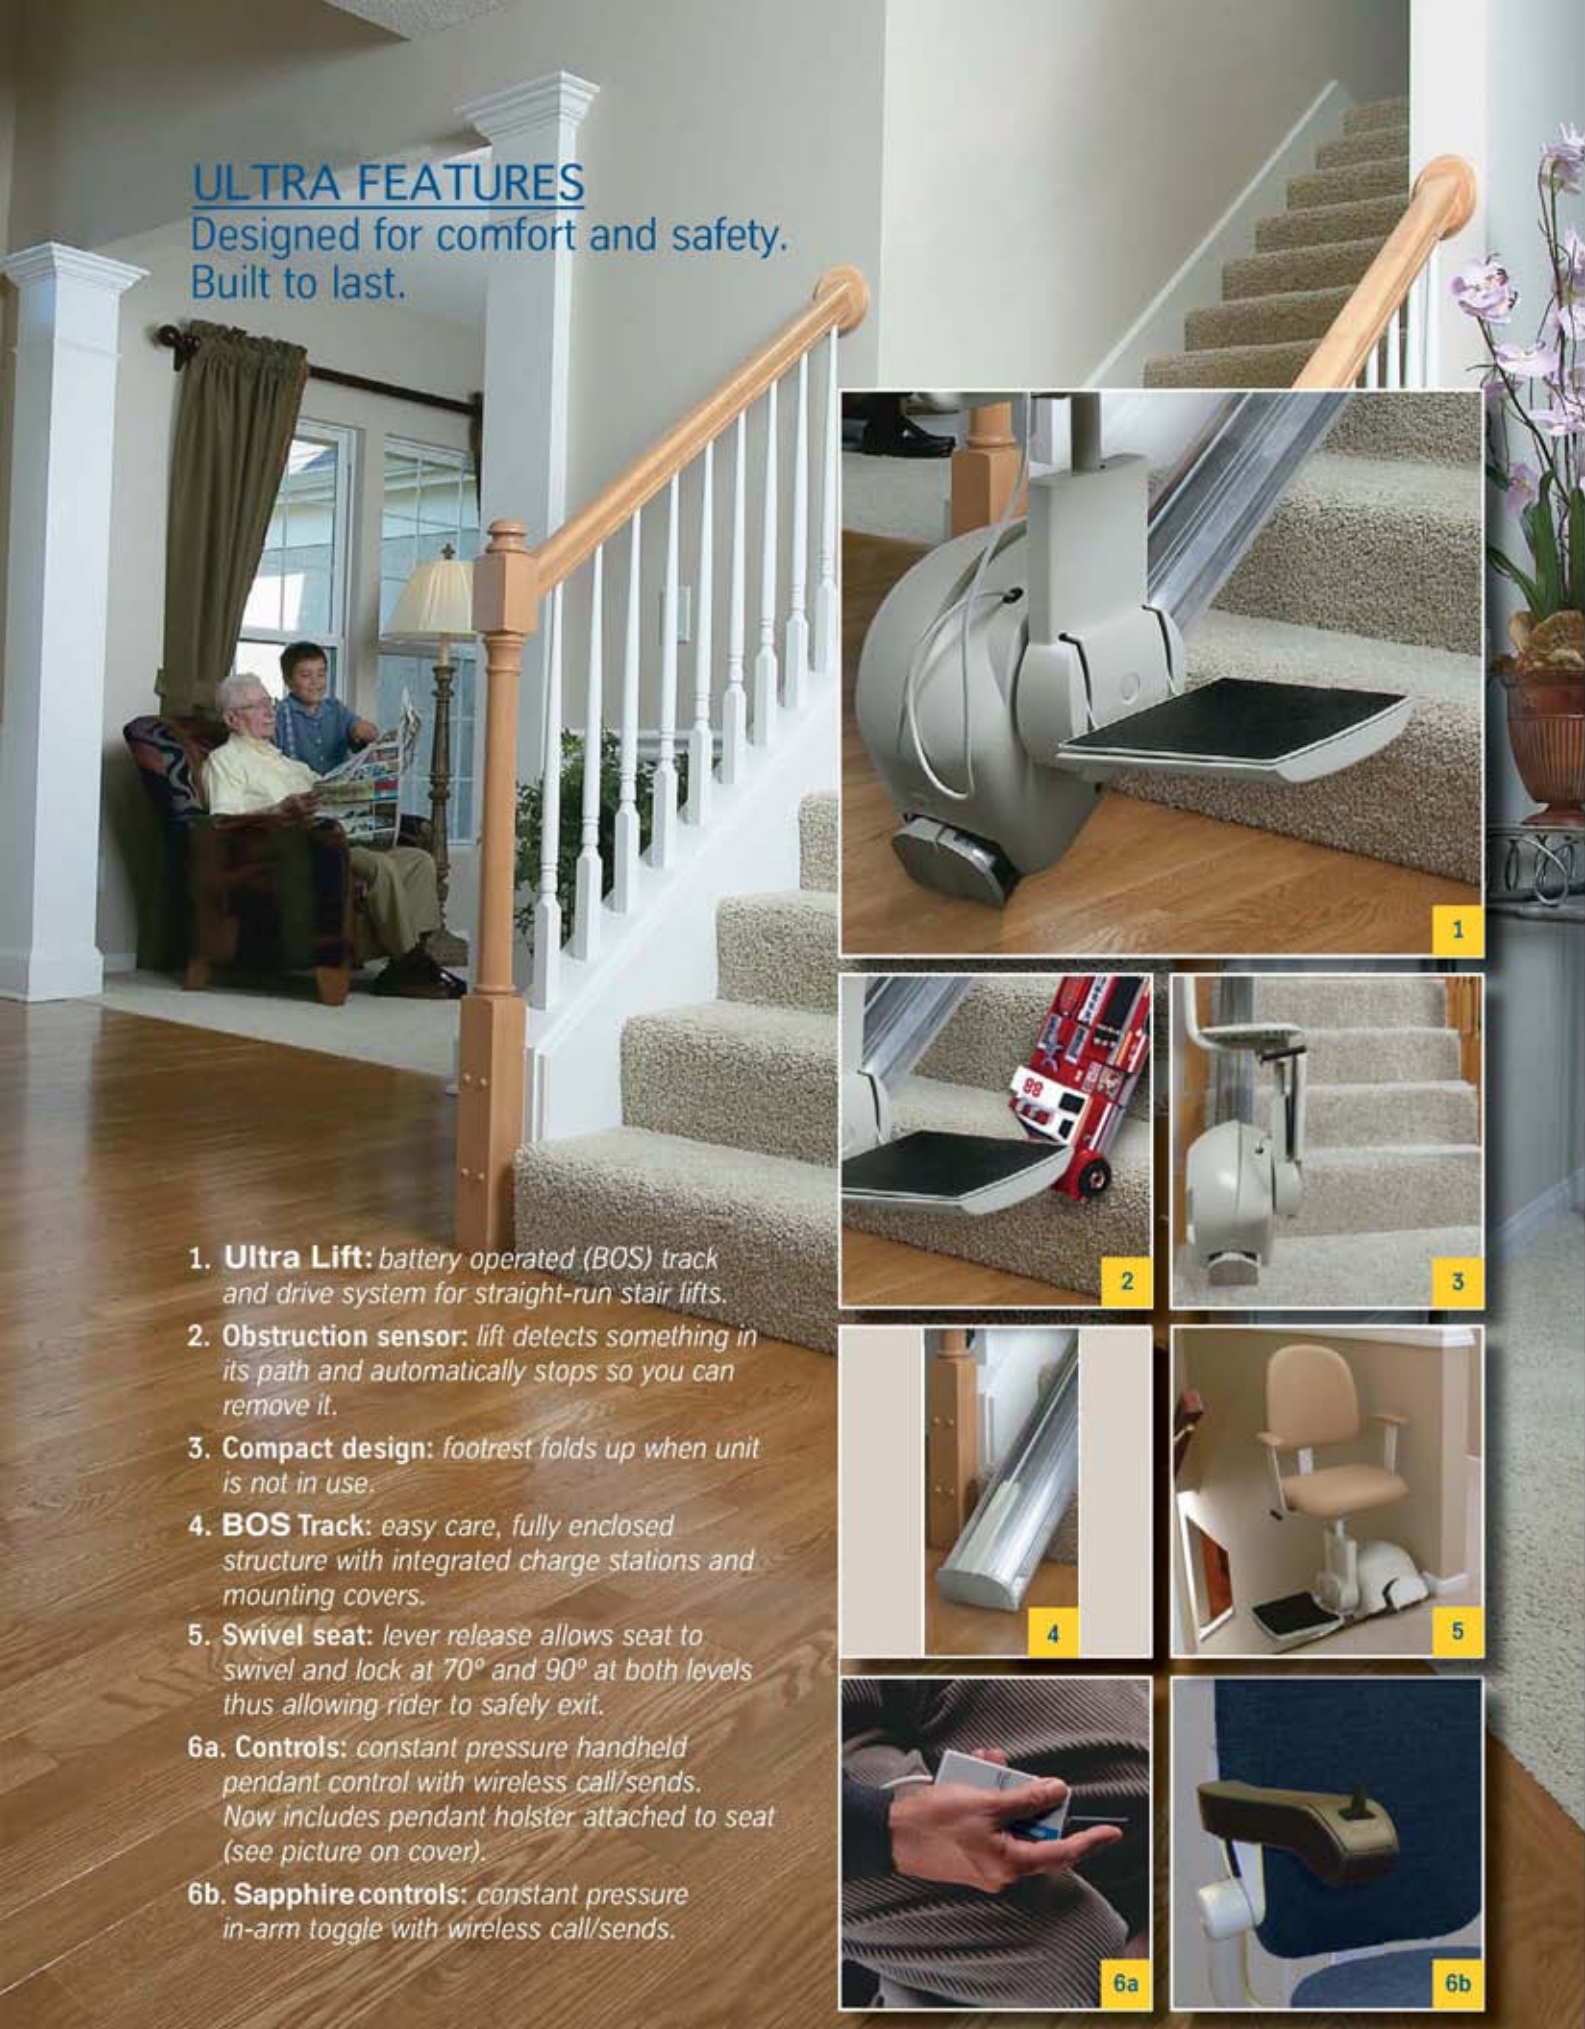

- 1. Ultra Lift:** battery operated (BOS) track and drive system for straight-run stair lifts.
- 2. Obstruction sensor:** lift detects something in its path and automatically stops so you can remove it.
- 3. Compact design:** footrest folds up when unit is not in use.
- 4. BOS Track:** easy care, fully enclosed structure with integrated charge stations and mounting covers.
- 5. Swivel seat:** lever release allows seat to swivel and lock at 70° and 90° at both levels thus allowing rider to safely exit.
- 6a. Controls:** constant pressure handheld pendant control with wireless call/sends. Now includes pendant holster attached to seat (see picture on cover).
- 6b. Sapphire controls:** constant pressure in-arm toggle with wireless call/sends.





**Caution: Stair lift will cause convenience.**

AmeriGlide continues its tradition of offering the most innovative lift products with its ULTRA line of stair lifts. ULTRA stair lifts deliver on our promise to put performance and safety in the reach of our customers at the lowest price possible. Finally you'll have a real choice when it comes to the stair lift you put in your home.

### Flexibility built into the design.

The ULTRA stair lift is the only stair lift on the market that offers a choice of six interchangeable seats. Just choose the seat and you'll get a stair lift that best suits your needs, budget, and lifestyle. And with a battery operated system (BOS) you'll never have to worry about power outages.

### Easy care and whisper quiet operation.

You'll appreciate the ULTRA's quiet motor, its smooth onset of movement, and fluid finish. The track has a narrow, low profile and is easy to keep clean. The ULTRA is designed for straight staircases.

### Why a stair lift?

The better question is why not a stair lift? The stair lift is a home appliance that adds safety, peace of mind, increased self-reliance, and convenience. It's the easiest way to go up and down stairs and requires no structural changes to your home to install.

**battery operated drive system**

### ULTRA Stair Lift Features (by seat type)

	Standard or Deluxe	Supreme	Premier	Heavy Duty	Sapphire
Stair shape	Straight				
Lifting capacity	300 lbs. (136 kg)			375 lbs. (170 kg)	300 lbs. (136 kg)
Speed	19 fpm (.10 ms)				
Travel	32' max. (9.75m) (track length)				
Incline limits	25° to 45°				
Drive System	Rack and pinion				
Brake	Self-locking worm gear				
Motor	.5 hp, 24 VDC with self-locking drive system, reversible				
Power Supply	115 VAC, 60 Hz, 3-wire grounded outlet				
Control System	Battery Operated System (BOS) with SoftStart / SoftStop control board with diagnostic LED's with two 12-volt maintenance free batteries. Integrated charge stations at top and bottom, charge fault alarm, low battery indication through audible alarm, reduced speed and LED indication				
Controls	Constant pressure handheld pendant control (with pendant holster) and 2 wireless remote controls (infra-red).			Constant pressure in-arm toggle control and two wireless remote controls (infra-red)	
Unit depth	14 1/2" folded, 25 1/4" unfolded				
Seat and footrest height	Seat height is infinitely adjustable within a 3" range. See illustration and chart on back for specific dimensions.				
Track	5 1/2" wide extruded aluminum with natural aluminum finish				
Track Length	16' stock or custom cut				
Safety Devices	Footrest obstruction sensor, swivel seat cut-off switch, final limits, seat belt				
Listing	ETL and cETL Listed				
Warranty	Five years on drive train and two years on all component parts				

*Specifications and/or colors subject to change without notice.*



## Seating choices

Six interchangeable seating options are available on the ULTRA stair lift. Choose the seat that best meets your needs.



### ULTRA Sapphire


- 300 lb. lifting capacity
- Contoured seat back
- Folding seat bottom with 18" wide seat
- Independently folding arms
- Controls wired into arm rests
- Folding footrest
- Upholstery:

-  Barley vinyl
-  Dove gray vinyl
-  Seaweed vinyl
-  Cinnamon vinyl
-  Bordeaux vinyl
-  Walnut fabric
-  Slate blue fabric
-  Graphite fabric
-  Laguna fabric



### ULTRA Heavy Duty

- 375 lb. lifting capacity
- Contoured seat back
- Folding seat bottom with 21" wide seat
- Fixed, straight arm rests
- Folding footrest
- Upholstery:

-  Taupe vinyl
-  Misty gray vinyl
-  Oatmeal herringbone fabric





## ULTRA Premier

- 300 lb. lifting capacity
- Contoured seat back
- Folding seat bottom with 18" wide seat
- Independently folding arms
- Folding footrest
- Upholstery:



*Taupe vinyl*



*Misty gray vinyl*



*Oatmeal herringbone fabric*



## ULTRA Deluxe

- 300 lb. lifting capacity
- Curved seat back
- Fixed seat bottom with 18 1/4" wide seat
- Fixed arm rests
- Folding footrest
- Upholstery:



*Tan vinyl*



*Desert sand fabric*



## ULTRA Supreme

- 300 lb. lifting capacity
- Curved seat back
- Folding seat bottom with 18" wide seat
- Fixed, straight arm rests
- Folding footrest
- Upholstery:



*Tan vinyl*



*Desert sand fabric*




## ULTRA Standard

- 300 lb. lifting capacity
- High impact polymer seat back
- Fixed seat bottom with 18 1/4" wide seat
- Fixed arm rests
- Folding footrest
- Unupholstered


**AmeriGlide**

# Dimensions

## END VIEW

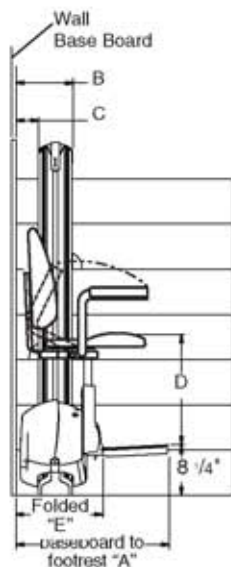

## SIDE VIEW

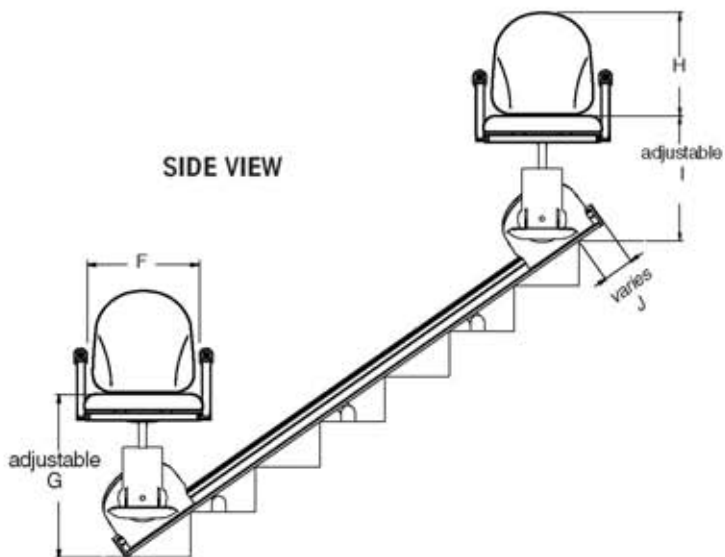

ULTRA Premier shown in illustration.

	Standard and Deluxe	Supreme	Premier	Heavy Duty	Sapphire
<b>A</b>	25 1/4"	25 1/4"	25 1/4"	30 1/4"	25 1/4"
<b>B</b>	8 3/4"	8 3/4"	8 3/4"	12"	8 3/4"
<b>C</b>	3 1/4"	3 1/4"	3 1/4"	6 1/4"	3 1/4"
<b>D</b>	14 1/4-17 1/4"	15 3/4-18 3/4"	15 1/2-18 1/2"	15 1/2-18 1/2"	15 3/4-18 3/4"
<b>E</b>	15 1/4"	15 1/4"	15 1/4"	20 3/4"	15 1/4"
<b>F</b>	18 1/4"	18"	18"	21"	18"
<b>G</b>	23-26"	24-27"	23 3/4-26 3/4"	23 1/2-26 1/2"	24-27"
<b>H</b>	15"	18"	17"	15"	18"
<b>I</b>	15 1/2-18 1/2"	17 1/2-20 1/2"	17 1/2-20 1/2"	17-20"	17 1/2-20 1/2"
<b>J</b>	3/8" (min.)	3/8" (min.)	3/8" (min.)	1 1/2" (min.)	3/8" (min.)

Specifications and/or colors subject to change without notice.

